

ENG

# DENVER<sup>®</sup>

DENVER WCT-8010


## Wild kamera Quick Start Guide



Micro SD Card 32GB  
(not included)



8X AA Batteries  
(not included)

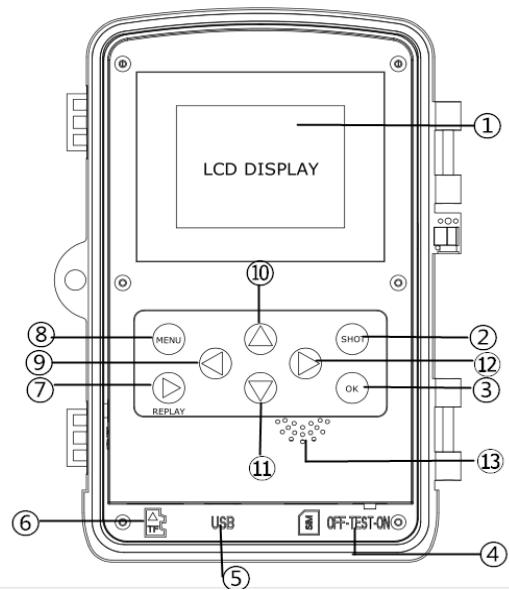

### Overview

2 inch color LCD Display  
Shot button  
OK button  
Power Switch  
USB connector  
Micro SD card slot  
Replay button

8)Menu button  
9)Left button  
10)Up button  
11)Down button  
12)Right button  
13)Microphone

The camera has 3 basic operation modes:

1. OFF mode: Power switch is at OFF position.
2. ON mode: Power switch is at ON position.
3. TEST mode: Power switch is at TEST position.

In the above three modes, the OFF mode is the specified safe mode when replacing the microSD or batteries and transporting the camera.

#### A. There are 3 modes under system setting for your selection.

a. Camera

It only takes photos at a time.

b. it only takes videos at a time.

c. Camera & Video.

It takes photo firstly, then takes videos.

#### B. There are also 2 ways to take photos or videos.

a. Manually to press the SHOT button

After sliding power switch to 'TEST', without any menu on the screen, press Shot to take photos or videos.

b. Automatically

After sliding power switch to ON, the LED blinks 15s, then the camera takes photos or videos when the movement is detected.

C. To view the photos or videos on the camera, please turn off the camera, slide power switch to Test, press OK button to enter

**view model.**

a. Photos viewing

Press up or down button to view the previous of next photo.

b. Videos viewing

Press Replay button to start the video, press Replay button again to stop.

Note: Press OK to return to screen.

**D. Please note, that this is not an error with the Camera:**

Heavy rain, fog and drizzle (in the dark) will give white photos without motive.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

**DENVER®**

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type WCT-8010 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.denver-electronics.com](http://www.denver-electronics.com) and [then click the search ICON on topline of website. Write modelnumber: WCT-8010.](#) Now enter product page, and red directive is found under downloads/other downloads

DENVER ELECTRONICS A/S

Omega 5A, Soeften

8382 Hinnerup

Denmark

[facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)

