

DAB-51B

denver.eu

04/2024



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information



Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Please notice that DAB signal can be weaken MUCH depending on the type of building you are living in. (fx. It can be hard to catch proper signal when being in a concrete building.)

Signal can also be different in different areas of the country. Please check your local transmitter to get the best signal in your area.

LOCATION OF CONTROLS

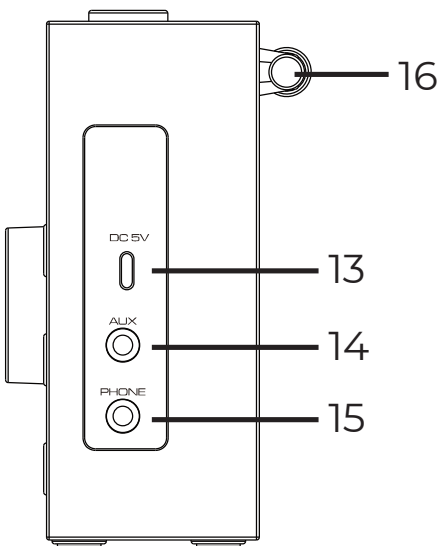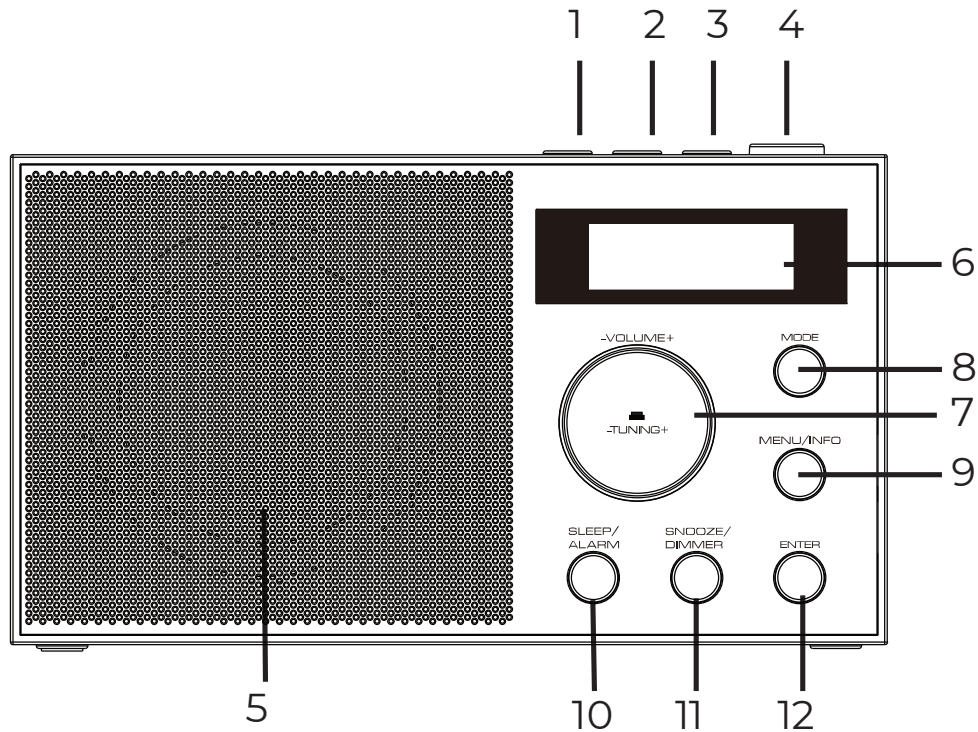

ACCESSORIES:
USB-C Cable

1. P1 (Preset station 1)
2. P2 (Preset station 2)
3. P3 (Preset station 3)
4. Power ON/OFF
5. Speaker
6. LCD display
7. Volume +/- or Tuning +/-
8. Mode
9. Menu / Info
10. Sleep / Alarm
11. Snooze / Dimmer
12. Enter
13. USB-C DC 5V power input jack
14. 3.5mm audio Aux-In input
15. 3.5mm mono Phone Jack
16. Antenna

POWER SUPPLY

1. Connect USB-C charging cable to DC 5V input jack on the radio.
2. Connect to USB adapter 5V, 1A (not included).
3. Press "Power ON/OFF" button to switch the unit on or to standby mode.

ANTENNA

Use Antenna to improve the signal reception.

1. Extend the antenna and adjust the position of the antenna for the best reception.

FULL SCAN

1. Turn on the unit and press "MODE" button to select FM or DAB mode.
2. Press and hold "ENTER" button to do a full scan and stations with suitable signal strength are automatically stored. After the search is completed, the first stored station is broadcast automatically.
3. Press "ENTER", then turn the "TUNING +/-" knob to choose the station and press "ENTER" again to confirm.

QUICK PRESET STORE & RECALL

1. Hold "P1 or P2 or P3" button to save the desired station as a preset.
2. Press "P1 or P2 or P3" button to recall the preset station.

DAB MENU

1. Press and hold "MENU" button.
2. Turn "TUNING +/-" knob to choose different modes.
3. Press "ENTER" button to confirm the selection.
4. Press "MENU" button to return to previous selection.

MANUAL TUNE

1. Turn "TUNING +/-" knob to select the desired frequency.
2. Press "ENTER" button to confirm the selection.

PRESET RECALL

1. Press and hold "MENU" button.
2. Turn "TUNING +/-" knob to select "Preset Recall".
3. Press "ENTER" button to confirm.
4. Turn "TUNING +/-" knob to select the desired preset number (from 1 to 40).
5. Press "ENTER" button to confirm.

PRESET STORE

1. Press and hold "MENU" button.
2. Turn "TUNING +/-" knob to select "Preset Store".
3. Press "ENTER" button to confirm.
4. Turn "TUNING +/-" knob to select the desired preset number.
5. Press "ENTER" button to confirm.

PRUNE

1. After finishing auto scan function, some invalid stations may have been saved.
2. A "?" will be shown in the invalid station.
3. Turn "TUNING +/-" knob to choose to delete the stations "No" or "Yes".
 - No: Return to the previous menu.
 - Yes: Remove invalid stations form the station list.
4. Press "ENTER" button to confirm the selection.

DRC (DYNAMIC RANGE CONTROL)

DRC On or Off enables a degree of compensation for the differences in the dynamic range between radio stations.

1. Turn "TUNING +/-" knob to confirm the DRC off, low or high setting: (The asterisk behind the option indicates the current setting.)

DRC off: No compensation applied

DRC low: Medium compensation applied

DRC high: Maximum compensation applied

2. Press "ENTER" button to confirm the selection.

FM MENU

1. Press and hold "MENU" button.
2. Turn "TUNING +/-" knob to choose different modes.
3. Press "ENTER" button to confirm the selection.
4. Press "MENU" button to return to previous selection.

SCAN SETTING

Turn "TUNING +/-" knob to confirm the selection below:

(The asterisk behind the option indicates the current setting.)

- Strong station
- All Stations: Regardless of the signal strength

AUDIO SETTING

Turn "TUNING +/-" knob to confirm the selection below:

(The asterisk behind the option indicates the current setting.)

- Stereo allowed
- Forced mono

SYSTEM

The SYSTEM menu allows you to change the settings relating to Sleep, Alarm, Time, Backlight, Language, Factory Reset and SW version.

1. Turn "TUNING +/-" knob to select an option.
2. Press "ENTER" button to confirm.

SLEEP

Press "SLEEP" button repeatedly to select the sleep time (Options: Off, 15, 30, 45, 60 and 90 minutes). Press "ENTER" button to confirm the selection.

After the set time has elapsed, the device automatically switches to standby.

ALARM

1. Press and hold "ALARM" button.
2. Turn "VOLUME +/-" knob to choose Alarm 1 or Alarm 2.
3. Press "ENTER" button to confirm the selection.

4. Turn "VOLUME +/-" knob to choose the desired setting.
5. Press "ENTER" button to save the setting.

Alarm On or Off

When the alarm setting is active, the corresponding Alarm 1 and Alarm 2 icon will be displayed. After the set time has expired the device will sound an alarm.

The volume will gradually increase until the set volume level is reached. The corresponding alarm icon will also flash on the display.

TIME

The date and time of the unit are set automatically when the radio transmission signals are received (if this information is available).

To set it manually, proceed as follows:

1. Press "MENU" button in standby mode, and go to SYSTEM.
2. Turn "TUNING +/-" knob to set Time/Date, 12/24 Hour, date format, auto update.
3. Press "ENTER" button to confirm the selection.

BACKLIGHT

1. Turn "TUNING +/-" knob to select an option.
 2. Press "ENTER" button to confirm.
- (The asterisk behind the option indicates the current setting.)

• Timeout

Options: 10, 20, 30, 45, 60, 90, 120, 180 sec or On

• On level

Low, Medium or High

LANGUAGE

1. Turn "TUNING +/-" knob to select a language.
 2. Press "ENTER" button to confirm.
- (The asterisk behind the option indicates the current setting.)

FACTORY RESET

This option returns the product to its initial state, restoring the default values.

Press “ENTER” button to confirm Yes or No.

SW VERSION

This option displays the current software version.

SNOOZE/ALARM OFF

To temporarily stop an audible alarm, press “SNOOZE” button.

The alarm will sound again after 9 minutes.

Press “POWER” button to cancel the snooze and the alarm function.

AUX-IN

Press “MODE” button to select “AUX” mode.

Use 3.5 mm jack AUX IN cable (not included) to connect the AUX IN jack and the external audio player. Control the music from the external audio player

(Volume adjustment from the device).

All controls are managed by the external audio source only.

HEADPHONE

Connect headphone (not included) with 3.5mm jack to the headphone jack of the device. Use the volume knob to adjust sound level.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DAB-51 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website.

Write model number: DAB-51. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:

DAB: 174.928 MHz to 239.200 MHz

FM: 87.5 - 108 MHz

Max Output Power: 15W / 1.5W RMS

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Nordics

Headquarter

Denver A/S
Omega 5A, Soefften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: +34 960 046 883
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**
E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soefften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

