



# denver



## SWC-392

[denver.eu](http://denver.eu)

01/24



FR

Cet appareil et  
ses accessoires  
sont recyclables

À DÉPOSER  
EN MAGASIN



OU

À DÉPOSER  
EN DÉCHÈTER



Points de collecte sur [www.quefairedemesdeche](http://www.quefairedemesdeche)  
Privilégiez la réparation ou le don de votre appa



# Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes lithium polymer battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Repairs or service should only be performed by qualified personnel.

6. Please remove the Smart watch in case of any leakage or excessive heat from the product to avoid burns or rash.
7. Only charge with the supplied USB cable.
8. Using other accessories than the ones delivered with the product can cause abnormal functionality.
9. Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
10. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.

## **Caution**

The device may cause skin irritation. Prolonged contact may contribute to skin irritation or allergies in some users. If you notice any signs of skin redness, swelling, itchiness or other skin irritation, please discontinue using the product. Continued use, even after symptoms subside, may result in renewed or increased irritation. If symptoms persist, consult your doctor. Do not open the enclosure or disassemble the product.

## **Blood Oxygen Notice**

**WARNING!** Only a medical practitioner is qualified to interpret your blood oxygen measurements. The use of this smart watch should not replace regular medical examinations.


Blood oxygen can be subject to wide fluctuations in a short period of time. Its level depends on many factors. Different medicines, alcohol and smoking can exert a large influence on the level of blood oxygen. Do not smoke, drink caffeinated beverages or exercise within 30 minutes before measuring your blood oxygen.

## **Intended Use**

This smart watch is intended for monitoring fitness-related metrics such as heart rate, blood pressure, distance walked or run, calorie consumption and quality of sleep. Data measured should not be used for any medical, ambulatory, or dietary reference.

# Charging

Fully charge the device (can take up to 3 hours) before using for the first time. To charge your device, plug the charging cable into the power adapter or USB port on your computer.

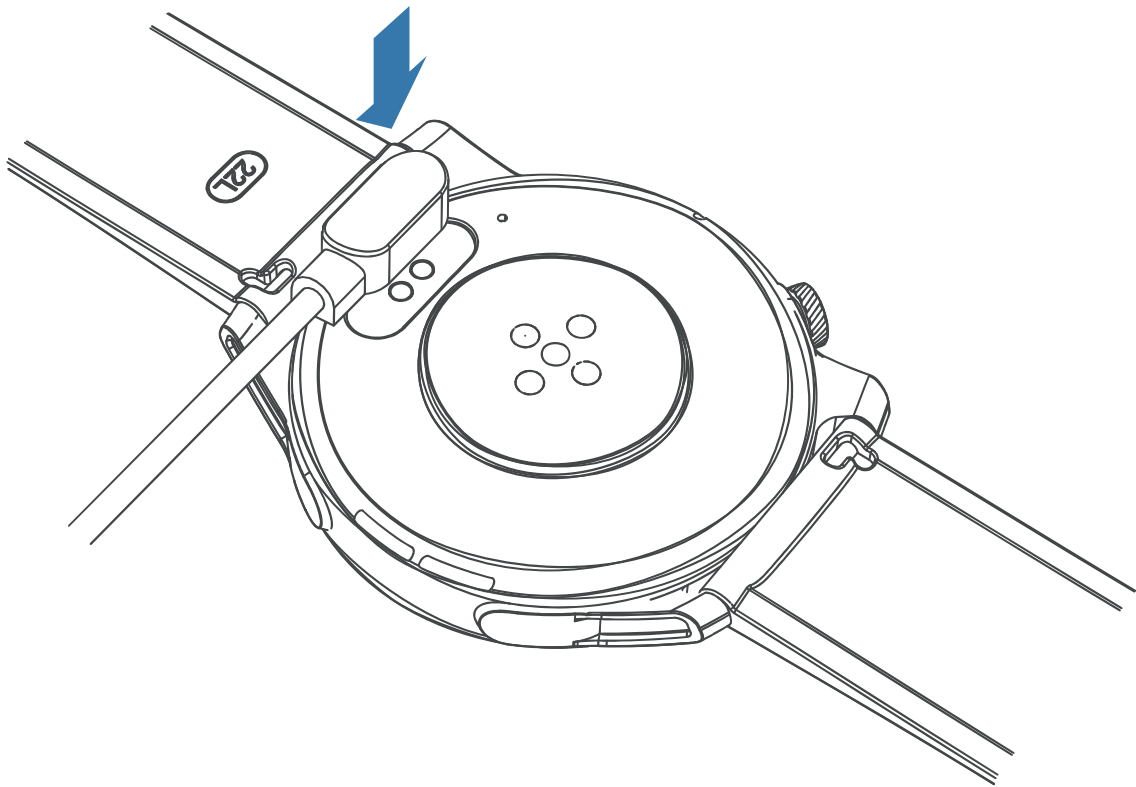

When fully charged, press and hold the side button for 3 seconds to power on the watch.

# Downloading the App

Scan the following QR code, download and install the DaFit App.




Scan QR Code and Download




# Pairing

Open the App and set up your profile, go to the [Device], Click [Add a Device], choose SWC-392 on the scanning list.


# Using the Touch Screen

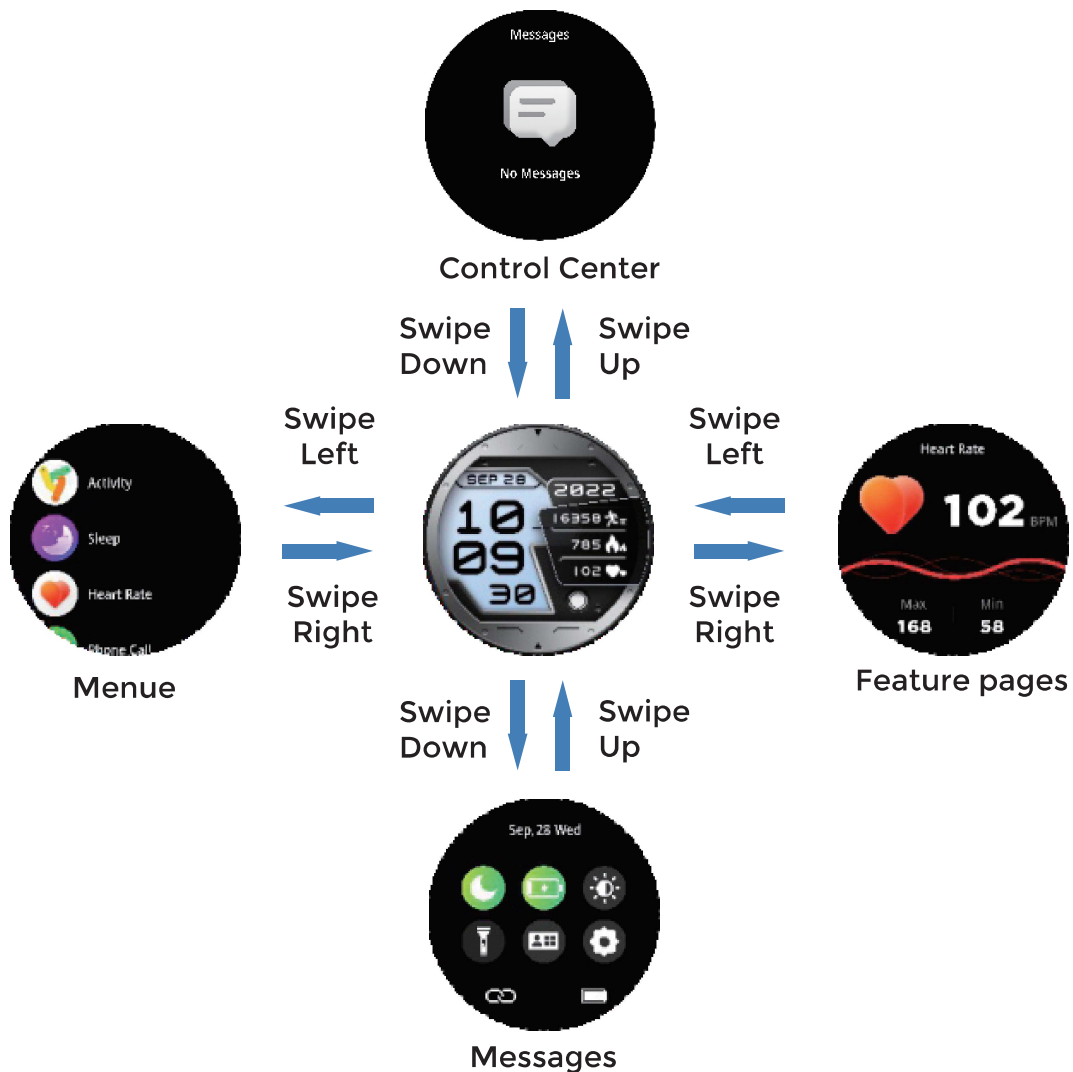

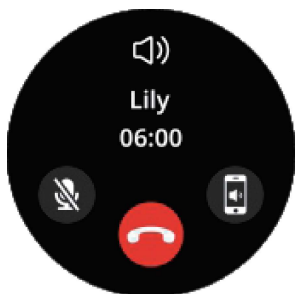


## Bluetooth call

After connecting the smart watch to the phone, you can use the watch to make and answer phone calls via Bluetooth. You can also view the call history on the watch. You need to keep the connection between the watch and the phone stable when using the Bluetooth call function.

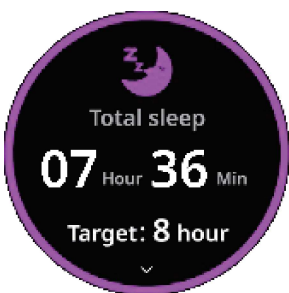

## Sleep

If you wear the Smart Watch in your sleep, it can provide the hours slept and quality of sleep stats on both the screen and the APP. **NOTE:** Sleep stats are reset to zero at 8:00 pm.

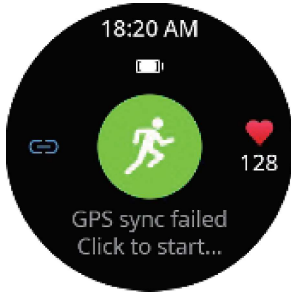

## Steps

Smart Watch automatically tracks steps taken and shows the stats on the screen. **NOTE:** Your movement stats are reset to zero at midnight.



## Training

Tap the training icon on the menu to start a new training session, there are 123 sport modes to choose from. The last training will be shown on the training page.



## Notifications

The watch can sync incoming notifications from Twitter, Facebook, WhatsApp, Instagram etc.

5 latest messages can be stored.

Note: You can switch the incoming notifications on/off in the APP.

## Using in wet conditions

Your device is water-resistant, which means it is rainproof and splashproof and can stand up to even the sweatiest workout.

**NOTE:** Do not swim with your smart watch. We also don't recommend showering with your wristband; though the water won't damage the device, wearing it 24/7 does not give your skin a chance to breathe. Whenever you get your bracelet wet, dry it thoroughly before putting it back on.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households.

Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type SWC-392 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [denver.eu](http://denver.eu) and then click the search ICON on topline of website. Write model number: SWC-392. Now enter product page, and RED directive is found under downloads/other downloads.

# Contact

## Nordics

Headquarter  
Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: +45 86 22 61 00  
(Push "1" for support)

E-Mail  
For technical questions, please write to:  
support.hq@denver.eu

For all other questions please write to:  
contact.hq@denver.eu

---

## Benelux

DENVER BENELUX B.V.  
Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: 0900-3437623

E-Mail: support.nl@denver.eu

---

## Spain/Portugal

DENVER SPAIN S.A  
Ronda Augustes y Louis Lumiere, n° 23 - nave 16  
Parque Tecnológico  
46980 PATERNA  
Valencia (Spain)

Spain  
Phone: +34 960 046 883  
Mail: support.es@denver.eu

Portugal:  
Phone: +35 1255 240 294  
E-Mail: denver.service@satfiel.com

## Germany

Denver Germany GmbH Service  
Max-Emanuel-Str. 4  
94036 Passau

Phone: +49 851 379 369 40

E-Mail  
support.de@denver.eu

Fairfixx GmbH  
Repair and service  
Rudolf-Diesel-Str. 3 TOR 2  
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,  
Smartphones & Tablets)

Tel.: +49 851 379 369 69  
E-Mail: denver@fairfixx.de

---

## Austria

Lurf Premium Service GmbH  
Deutschstrasse 1  
1230 Wien

Phone: +43 1 904 3085  
E-Mail: denver@lurfservice.at

---

If your country is not listed above,  
please write an email to  
support@denver.eu



DENVER A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

denver.eu  
facebook.com/denver.eu





Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

[denver.eu](http://denver.eu)

